


VESTA™

VESTA™ DWV303DB Automatic Compact Dishwasher

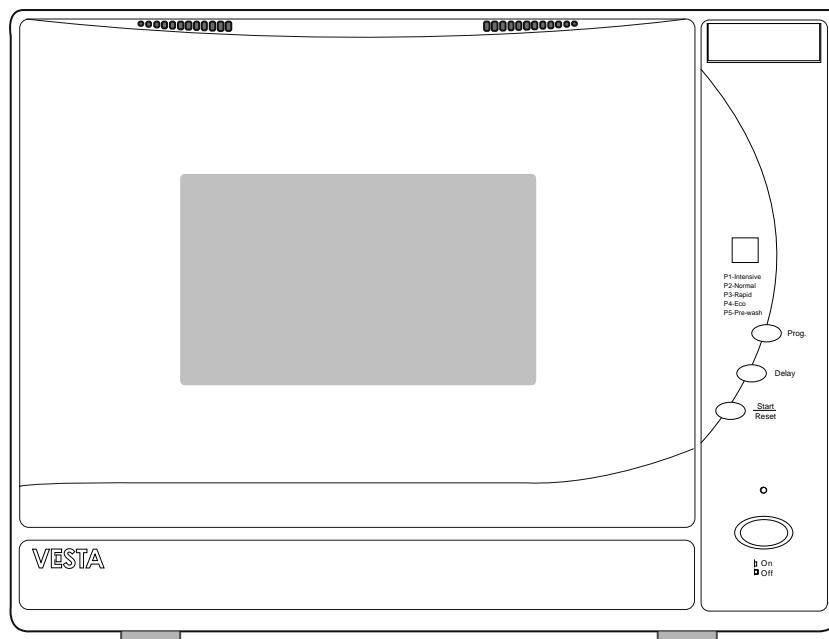

Installation Instructions and Use & Care Guide


Contents

Unit Parts Identification	1
Important Safety Instructions	2
Installation Instructions	
Installation Requirements	3
Built-in Installation	4
Countertop Installation	5
Use & Care Guide	
Loading the Dishwasher	6
Using the Right Detergent	7
Using a Rinsing Agent	7
Pre Wash, Delay Start & Eco Features	8
Program Summary/Selection Chart	9
Operating Your Dishwasher	10
Disconnecting Your Dishwasher	11
Troubleshooting	
Troubleshooting Chart	12
Error Code Key	13
If You Need Service	13




READ ALL INSTRUCTIONS BEFORE USING


UNIT PARTS IDENTIFICATION

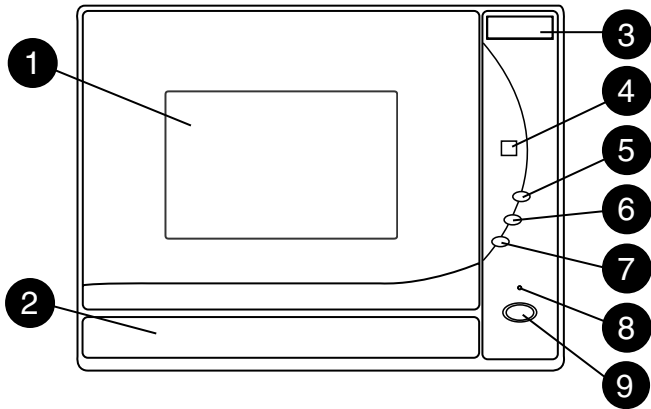

1. WINDOW
2. FRONT PANEL
3. DOOR RELEASE BUTTON
4. LED DISPLAY
5. PROGRAM BUTTON
6. DELAY START BUTTON
7. START/RESET BUTTON
8. POWER LIGHT
9. POWER ON-OFF BUTTON
10. WATER INLET CONNECTION
11. DRAIN HOSE CONNECTION
12. POWER CORD - 6' Length (182.8 cm)
13. RINSE AGENT DISPENSER
14. SPRAY ARM
15. FILTER
16. DOOR ASSEMBLY
17. DOOR LATCH MECHANISM
18. DETERGENT (INDENT) LOCATION

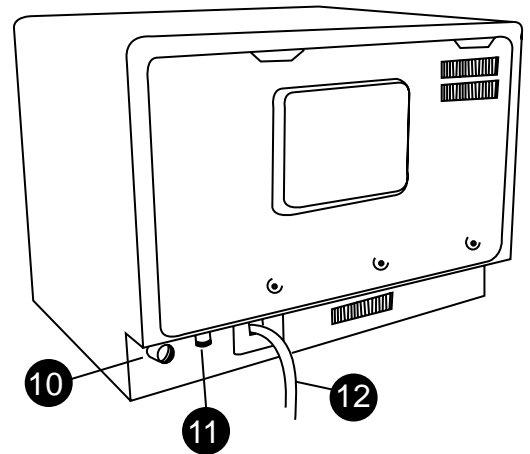


18. DISH RACK (NOT SHOWN)
19. SILVERWARE BASKET (NOT SHOWN)
20. RINSE AGENT MEASURING CONTAINER (NOT SHOWN)

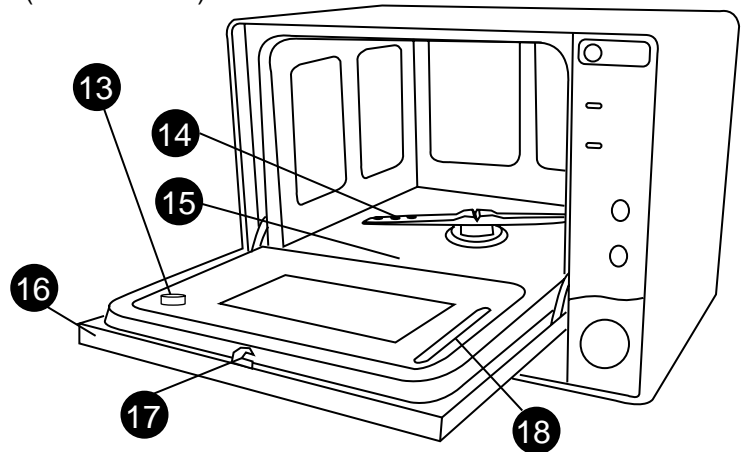



COUNTERTOP HOSE KIT (Part# DWVCTHK)

QUICK-CONNECT FAUCET ADAPTER

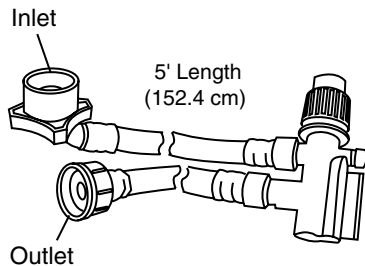


BUILT-IN HOSE KIT (Part# DWVBIHK)

OUTLET HOSE

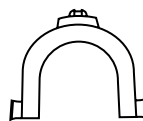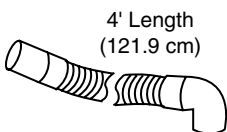



OUTLET HOSE HANGER

INLET HOSE

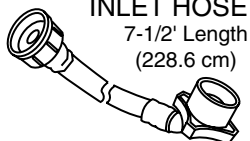

OUTLET HOSE CLAMP

 BUILT-IN TRIM KIT (Part# DWVTKBL)

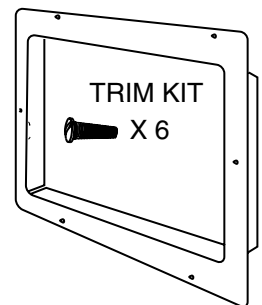

INSTALLATION BLOCK

IMPORTANT SAFETY INSTRUCTIONS



WARNING



When using your dishwasher, follow basic safety precautions:

- **Read all instructions before using the dishwasher.**
- **Use the dishwasher only for its intended use.**
- **Use only detergents or wetting agents recommended for use in a dishwasher and keep them out of reach of children.**

When Loading Items To Be Washed:

- Locate sharp items so that they are not likely to damage the door seal.
- Load sharp knives with the handles up to reduce the risk of cut-type injuries.
- Do not load plastic items unless they are marked "Dishwasher Safe" or the equivalent. For plastic items not marked as such, check the manufacturers recommendations.
- Do not load glasses over the dish rack pins. Glasses loaded over dish rack pins are not properly supported and are likely to get damaged.

- Items with wooden or bone handles, or items joined together with glue are unsuitable as they cannot resist hot water.
- Do not touch the heating element during or immediately after use.
- Do not operate your dishwasher unless all enclosure panels are properly in place.
- Do not tamper with controls.
- Do not abuse, sit on, or stand on the open door or dish-rack of the dishwasher. The machine may topple over.
- Protect cables and hoses from high temperatures.
- To reduce the risk of injury, do not allow children to operate or play on the dishwasher.
- When removing an old dishwasher for service or discarding it, remove the door to the washing compartment.
- Under certain conditions, hydrogen gas may be produced in a hot-water system that has not been used for two weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hot-water system has not been used for such a period, before using the dishwasher, turn on all hot-water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As hydrogen gas is flammable, do not smoke or use an open flame during this time.

SAVE THESE INSTRUCTIONS



WARNING



Instructions pertaining to a risk of fire, electric shock, or injury to persons.

Electrical Instructions:

An electrical supply of 120 volts AC only, 60Hz is required. Make sure that a suitable electrical supply socket is located close to where the dishwasher is to be placed.

Grounding Instructions:

This appliance must be grounded. In the event of malfunction, or breakdown, grounding will reduce the risk of electric shock by providing the path of least resistance for electric current. This appliance is equipped with a cord having an equipment grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

INSTALLATION INSTRUCTIONS

INSTALLATION REQUIREMENTS

All Installations

- Remove all packing materials carefully.
- Make sure the electrical power supply is within easy reach of the machine. The power cord is 6 Feet (182.8 cm) long.
- Supply shut-off valves should be easily accessible.
- If the water pipes you will be connecting to are new or unused, run the water until clear to remove any debris that could clog the water valves before connecting the machine.
- The dishwasher must be installed on a 'solid' level surface.

Electrical

- Machine Voltage/Amperage: 120V, 60 Hz, 10.6 Total Amps
- Connection: 3-prong plug with cord provided
- Circuit/Protector: 3-wire single phase, 120V, 60Hz, AC, on a separate 15 Amp circuit.

Water Pressure


For best operating results, incoming water pressure should be between 10 and 145 psi (.05 and 10 bar). Incoming water supply for the dishwasher is controlled by a 'pressure switch' application, so if available water pressure is low, dishwasher fill time will be longer.

For Best Results

Your dishwasher cleans by spraying a mixture of hot clean water and detergent (under pressure) against the soiled surface of dishes. The water is pumped through a rotating spray arm, drained through a filter (to remove food and soiled particles) and pumped back through the spray arm.

Soiled water is pumped out and replaced with clean water at the end of each cycle (the number of times depends on the cycle being used). For best cleaning results, the water temperature must be at least 130°F (55°C). To prevent dishwasher damage, the temperature of the incoming water supply should not exceed 160°F (71°C).

Note: Hard Water conditions will adversely affect washability performance of your dishwasher. Hard water conditions will also contribute to "Lime" (white film substance) deposits and/or "Scaling" on the stainless steel surface of the dishwasher tub and "Heater Element" located in the sump underneath the removable filter screen. To assist in minimizing these conditions, it is recommended to periodically operate/rinse the inside of the dishwasher (empty) using 1 cup of white vinegar (at least once a week).

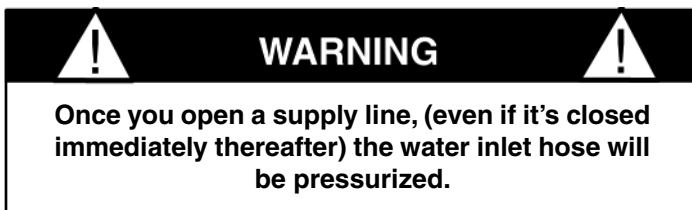

INSTALLATION INSTRUCTIONS

BUILT-IN INSTALLATION



If you specified a built-in installation, your dishwasher came with the Built-In Hose Kit (Part# DWVBIHK) and Built-In Trim Kit (Part# DWVTKBL).

Installation Location


- This dishwasher is approved for built-in installations.
- Air space requirements: Sides and Bottom=1/4" (.6 cm), Top=1" (2.5 cm), Rear=2" (5.08 cm)
- The water inlet hose from the machine terminates in a 3/4" "female" connector. The water supply should therefore terminate in a similar "male" connector and should have a shutoff close by in the pipe.
- Make sure the HOT water supply faucet connection is within easy reach of the machine. The fill-drain hose assembly is 5 Feet (152.4 cm) long.

Water Drainage


- *Standpipe Drain System:* No point of the drain hose must ever be placed higher than the top of the machine. If this should ever happen, the functioning of the machine can be affected.
- *Sink Drainpipe System:* When routing the drain hose through cabinets or walls, use a protective material such as electrical or duct tape to cover sharp edges that could damage the drain hose. Use a suitable clamp to secure the drain hose to the "Y" branch or disposer. With a sink drainpipe system, you may connect directly: **1)** To a disposer by following the manufacturers attachment method. **2)** directly to a "Y" branch tailpiece (available at most hardware stores).

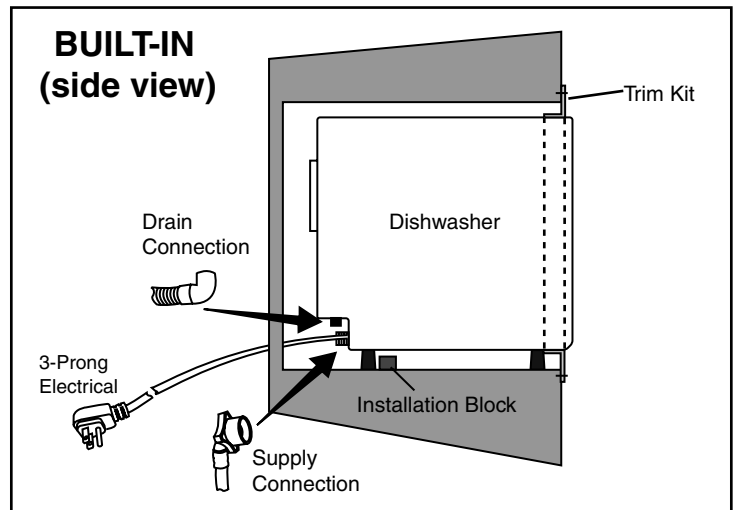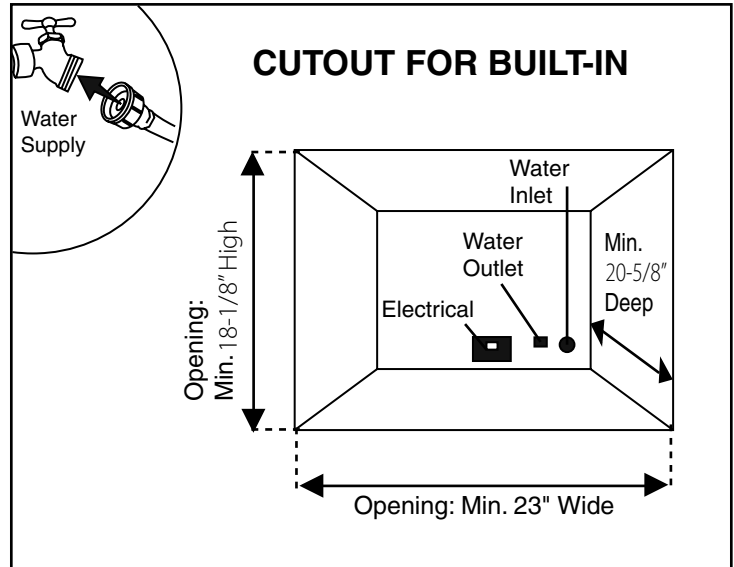

TRIM KIT DIMENSIONS

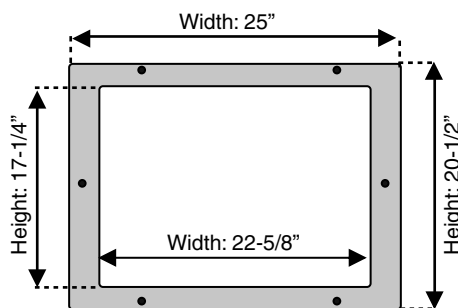


WATER DRAINAGE OPTIONS

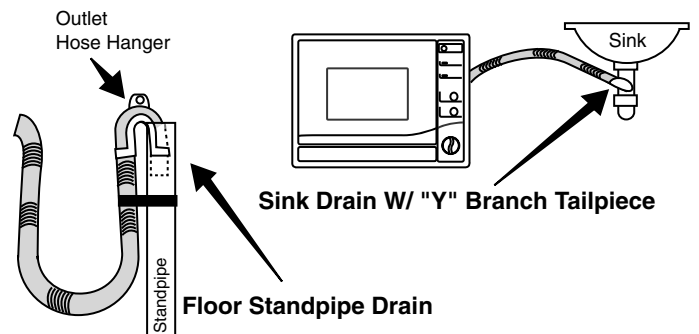

INSTALLATION INSTRUCTIONS

COUNTERTOP INSTALLATION

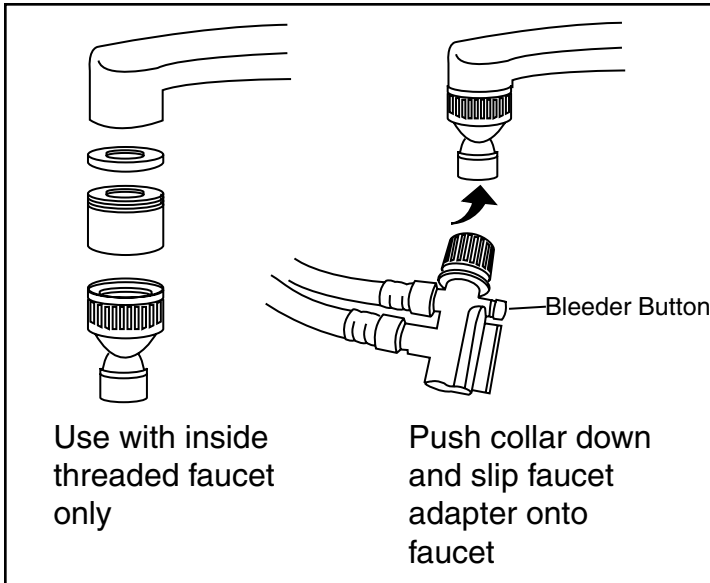

If you specified a countertop installation, your dishwasher came with a Quick-Connect Faucet Adapter Kit (Part# DWVCTHK) that includes a fill and drain hose assembly that is compatible with both male (exterior) and female (interior) threaded faucet connections. If your existing faucet adapter is not compatible with the Quick-Connect hose assembly supplied, use the adapter supplied with the Quick Connect Faucet Adapter Kit:

- If your faucet has a "male" type thread connection, remove the second rubber washer and use only the standard washer supplied inside the tap adapter (both 5mm thick).
- If your faucet has a "female" type thread connection, keep the two rubber washers (both 5 mm) installed inside the tap adapter.

Installation Location

The minimum height clearance required to install your dishwasher on a countertop surface with overhead cupboards is 17-1/8" (45 cm).

Follow These Steps

1. Screw the faucet adapter onto the faucet, then check for leaks. (Use plumbing tape to eliminate leaks if necessary.)
2. Connect the open end of the drain hose to the Drain Hose Connection at the rear of the dishwasher.
3. Connect the water inlet hose to the Water Inlet Connection at the rear of the dishwasher.
4. Attach the Quick-Connect Faucet Adapter by pulling down on the outer collar while pushing upwards on the faucet adapter. When the Quick Connect snaps onto the adapter, release the outer collar and it will lock into place. Check for a correct fit.
5. Slowly open the hot water line. Examine all hose connections for water leaks. Immediately close the water supply and repair the hose connections if leaks are found.
6. If you are unable to successfully complete the countertop installation yourself, please call our **Service Headquarters toll-free: 1-800-356-0766.**

LOADING THE DISHWASHER

The dishwasher is designed to receive four standard “4 piece” plate settings consisting of the following:

- 4 Dinner Plates
- 4 Bread & Butter Plates
- 4 Fruit Bowls
- 4 Cups and Saucers
- 4 Dinner Forks
- 4 Dinner Knives
- 4 Salad Forks
- 4 Teaspoons
- 2 Serving Spoons
- 1 Serving Fork



NOTE: For ease of loading/unloading large size dinner plates from the dish rack it may be necessary to (temporarily) remove the silverware basket. When loading/unloading is complete, return the silverware basket to it's original position.

Preparing Your Dishes For Washing

- Scrape off all solid food particles from the dishes.
- Remove excessive quantities of oil or grease.
- Empty any liquids from glasses and cups.
- All dishes should be thoroughly rinsed before being placed inside the dishwasher.
- Arrange all items with recessed or curved sections on a slant to drain water away.
- Cups, pots, glasses etc. should be placed upside down.

NOTE: Dishes with dried-on foods are more difficult to wash and may not come clean in a normal wash cycle.

**IMPORTANT**

Your dishwasher is not a “waste disposal unit”, clean off large particles of food sediments before placing dishes in your dishwasher.


USE AND CARE GUIDE

USING THE RIGHT DETERGENT

Use only detergent specifically made for use in dishwashers, as other types will cause over-sudsing. If your detergent is old and/or lumpy, throw it away. Old detergent loses its washing power. Lumpy detergent won't dissolve. The amount of detergent you use depends if your water is "hard" or "soft".

The recessed detergent area is located on the inside door panel and will hold approximately 0.5 oz. of detergent.

NOTE: Hard water requires more detergent to get dishes clean. Soft water requires less detergent to get dishes clean.

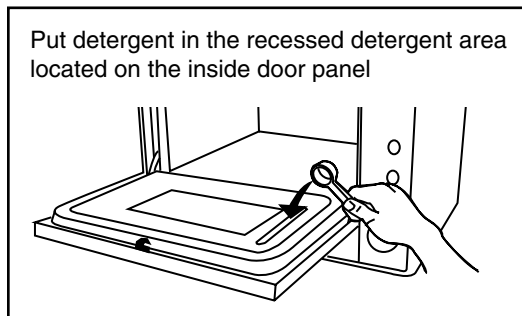

USING A RINSING AGENT

You can help prevent unsightly spots on dishes and glassware and reduce drying time by using a rinse agent. A rinse agent is specially formulated to rinse away food and detergent residues that can be left behind on your dishes. Used regularly, a rinse agent will automatically provide you with cleaner dishes every time you wash.

- To fill the rinse agent dispenser, unscrew the dispenser cap located on the inside of the dishwasher door. Slowly add the rinse agent into the dispenser until it just reaches the bottom of the filling cap inside of the dispenser opening. Replace the cap. The dispenser automatically releases rinse agent into the final rinse water at the end of the wash cycle.

USE AND CARE GUIDE

DELAY START

DELAY START allows you to delay the start of any cycle by 1 to 24 hours. To activate this feature, press the DELAY START button and refer to the LED DISPLAY. Each press of the button corresponds to one hour. Once you've reached the desired hour(s), use the PROGRAM button to select a wash cycle, then press START/RESET. The LED DISPLAY will flash the hour(s) you selected until the cycle begins.

PRE-WASH



PRE WASH is a convenience feature that allows dishes to be rinsed, if you don't have a full load ready to be washed (preventing food from becoming dried/caked on the dish surface). It is not necessary to add detergent to the dishwasher during the PRE WASH cycle. However, due to the short duration of the PRE WASH cycle (12 minutes only) make sure the incoming water supply is HOT.

INTENSIVE WASH

The INTENSIVE WASH feature gives you the option of rinsing dishes at very high temperatures for a longer time. When activated, the cycle activates a heating element that will raise the internal water temperature of the dishwasher to 156°F (69°C) during the rinse cycle.



ECO CYCLE

The ECO CYCLE gives you the option of washing dishes at normal incoming water temperature. When activated, the ECO CYCLE reduces or eliminates heating time depending on incoming water temperature.

 **IMPORTANT** 

NOTE ABOUT DRYING

The dishes dry by a “convection” method only. To speed-up the drying time, it is suggested to leave the dishwasher door partially open after the program is complete. This will allow humidity from within to escape. Push the “Door Open” button and the door pops open to a pre-set convection drying position.

 **CAUTION** 

Water temperatures this high can cause severe burns/scalding. Always exercise extreme care when opening and/or entering the dishwasher during the Sani wash cycle.

USE AND CARE GUIDE

PROGRAM SUMMARY / SELECTION CHART

PROGRAM SUMMARY/SELECTION

P1 - INTENSIVE WASH

Water Temperature: Wash 129°F / Rinse 156°F
Program Duration: 125 Minutes (+ heating time)
Water Consumption: 2.74 gal.

P2 - NORMAL WASH

Water Temperature: Wash 125°F / Rinse 152°F
Program Duration: 130 Minutes (+ heating time)
Water Consumption: 2.74 gal.

P3 - RAPID WASH

Water Temperature: Wash 120°F / Rinse 131°F
Program Duration: 70 Minutes (+ heating time)
Water Consumption: 2.54 gal.

P4 - ECO WASH

Water Temperature: Wash 129°F / Rinse 156°F
Program Duration: 120 Minutes
Water Consumption: 2.74 gal.

P5 - PRE WASH

Water Temperature: Incoming Water Supply
Program Duration: 12 Minutes
Water Consumption: 1.43 gal.


NOTE: Wash times may vary according to the incoming water temperature and the environmental temperature.

NOTE: At the beginning of each cycle, the dishwasher always starts in the “drain” mode. This is because the drain pump always retains a small amount of water (in the sump) from the previous (last) cycle. This is necessary to keep the pump primed. Therefore, don’t be alarmed if a small amount of water being pumped out from the drain hose prior to the start of the regular wash cycle. THIS IS NORMAL.

USE AND CARE GUIDE

OPERATING YOUR DISHWASHER

1. Make sure the water inlet and drain hoses are correctly and securely connected.
2. **Push the DOOR OPEN button to open the door.**
3. Place the dishes on the Dish Rack and cutlery (unsorted) inside the Silverware Basket.
4. Check to make sure that the rotating spray arm can turn freely all the way around. If necessary, remove any obstacles.
5. Fill the detergent in the recessed area on the door panel (approx. 0.5 oz.)
6. Firmly close the door. Open the water supply.
7. **Push the Power ON-OFF button.**
 - Push button "in" = Power ON
 - Push button "out" = Power OFF. The Power Light will illuminate, indicating the machine is receiving power.
8. **Press the PROGRAM BUTTON to select a program.** The LED DISPLAY window will show the name of the wash program you selected (P5, P4, P3, P2, or P1).
9. **Press the START/RESET button.** The LED DISPLAY will flash the name of the selected wash program 8 times and the cycle will begin. The name of the selected wash program will continue flashing for the duration of cycle.
10. *To pause a program* that has already started, press the START/RESET button. *To cancel the program* and start another one, press the ON-OFF button, then follow steps 7 through 9. **NOTE: The dishwasher is designed to pause if the door is opened accidentally during operation. The cycle will resume 5 seconds after the door is closed.**
11. **At the end of the cycle,** the dishwasher will beep 8 times and the LED DISPLAY will stop flashing. The Power Light will remain illuminated until the Power ON-OFF button is switched OFF. The LED DISPLAY will turn off if the dishwasher is inactive for more than 10 minutes.

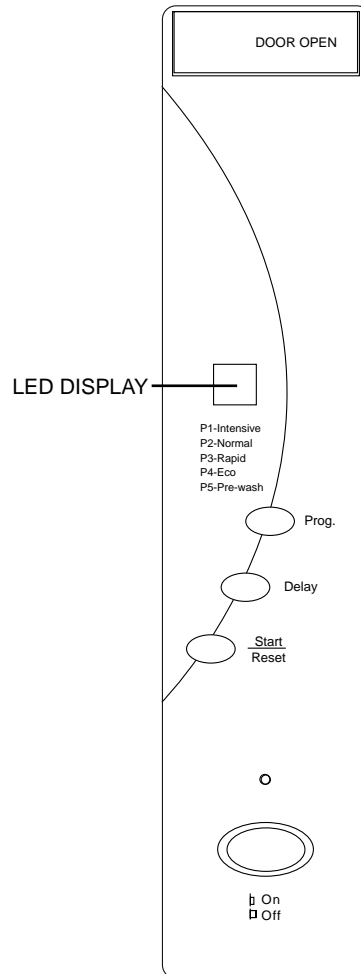

12. When the cycle is complete, always relieve pressure on the inlet hose by following the instructions on page 11.
13. After washing, dishes should be allowed to cool down for approx. 15 minutes so they are not too hot to handle. **Dishes will cool quicker if door is slightly open.**
14. After unloading the dishwasher, remove the Filter, clean off any bits of food, and put the Filter back in its position.

USE AND CARE GUIDE

DISCONNECTING YOUR DISHWASHER

When the cycle is complete, always relieve water pressure from the inlet hose:

- **Close the HOT water supply at the faucet.**
- **Disconnect the Power Supply Cord**

For Built-In Installations



Periodically inspect and replace hoses if bulges, kinks, cuts, wear, or leaks are found. Remove and clean the filters and the water valves. Replace the inlet hose as needed to reduce the risk of hose failure.

For Countertop Installations



Release water pressure from inside the fill hose by pressing the “red” Bleeder Button on the Quick Connect Assembly until the water flow stops. Then, disconnect the Quick Connect Hose Assembly from the faucet by pulling down on the outer collar.

When the dishwasher is not in use, place/store the hose on a hanger hose bracket or similar hanging device.



Appliances that are to be discarded must be made unusable. Before discarding, remove the door to the washing compartment.

 **CAUTION** 

DO NOT LET CHILDREN DISCONNECT THE DISHWASHER QUICK-CONNECT HOSE ASSEMBLY. Close supervision of children is always important around appliances.

 **WARNING** 

To relieve water pressure that’s inside the water inlet hose, first close the water line (faucet). Then press the Bleeder Button on the Quick Connect Assembly until the flow of water stops.

 **WARNING** 

BEFORE DISCONNECTING THE QUICK-CONNECT ASSEMBLY FROM THE FAUCET, ALWAYS RELIEVE WATER PRESSURE. Failure to do so will result in back-pressure overspray. Back-pressure overspray could cause severe burns and/or scalding as the temperature of incoming water could be very hot.

TROUBLESHOOTING COMMON PROBLEMS & SOLUTIONS

TROUBLESHOOTING CHART

You'll find many answers to common problems in the Troubleshooting section below. If you read this section first, you may not need to call for service at all.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Dishwasher will not start	<ul style="list-style-type: none"> - Dishwasher not receiving electrical power. - Door is unlatched - Dishwasher not level 	<ul style="list-style-type: none"> - Check electrical connection fuse/circuit breaker - Close and latch door - Make sure dishwasher is installed 'solid' level surface
Dishes not clean	<ul style="list-style-type: none"> - Improper loading - Spray arm not rotating freely - Not enough detergent and/ or improper detergent being used. - Improperly prepared dishes - Water inlet hose kinked/bent due to improper installation 	<ul style="list-style-type: none"> - Arrange dishes so spray action reaches all surfaces. - Do not overload dishwasher - Make sure nothing (i.e. cutlery) is obstructing spray arm rotation - Make sure filter screen has not become dislodged and is not obstructing spray arm rotation - Use more dishwasher detergent - Do not use detergent that is hard or caked - Use only a recommended dishwasher detergent. - Excess food soil and liquids should be removed from dishes before loading. - Eliminate kink or bend from inlet hose
Chipping or breaking glassware	<ul style="list-style-type: none"> - Improper loading of dishes 	<ul style="list-style-type: none"> - Do not overload dish rack. Load glasses on the upper rack only, not over dish rack pins. Glasses loaded over dish rack pins are not properly supported and subject to damage.
Water remains in bottom	<ul style="list-style-type: none"> - A small amount of water (in sump area) is normal. - Excessive amount of water; Cycle not completed 	<ul style="list-style-type: none"> - This is necessary to keep the pump primed and is drained automatically at the beginning of each cycle. - Allow dishwasher to complete full cycle.

TROUBLESHOOTING COMMON PROBLEMS & SOLUTIONS

ERROR CODE KEY

Your dishwasher has an error code display function. If the appliance malfunctions, the an error code will be shown in the display window (see right).

ERROR CODE	MEANS	POSSIBLE PROBLEM
E1	- LONG WATER FILL TIME	- Faucet is not open.
E2	- LONG DRAIN TIME	- The installation position of the drain pipe is too high.
E3	- LONG HEATING TIME	- Malfunction of temperature sensor or of heating element.
E4	- ABNORMAL WATER LEVEL	- Too much inlet water.

IF YOU NEED SERVICE

This Vesta™ appliance comes with a Limited Warranty (please read the Limited Warranty Statement that came with your dishwasher for complete details.) Please refer to the Troubleshooting Chart and Error Code Key before calling for service.

**If you do need service, you can relax knowing that help is only a phone call away.
Call our Technical Service and Assistance Department toll-free at**

1-800-356-0766
Monday-Friday (8:00AM-5:00PM Pacific Time)

VESTA™

Vesta DWV303DB
Automatic Compact Dishwasher

Westland Sales Corporate Headquarters : Clackamas, OR
Westland Sales Elkhart Operations: Elkhart, IN
Phone: 503-655-2563 Toll-Free: 800-356-0766
www.westlandsales.com

© 2008 Westland Sales